



Gigabit L2 Managed Switch

NS2010GX



Installation manual introduction

The Product installation manual mainly describes NS2010GX switch hardware features, installation methods, and precautions during the installation.

This manual includes the following chapters:

Chapter 1: Product Introduction. Briefly describes the basic features of the switch and the appearance details.

Chapter 2: Product Installation. Guide the switch hardware installation methods and precautions.

Chapter 3: Hardware Connections. Guide the connection between switches and other devices and precautions.

Chapter 4: Technical Specifications.



NOTE: To avoid potential device damage and personal injury, read the related information in this manual before installing the device.

Agreement

The term "switch" mentioned in this manual, unless otherwise specified, refers to Gigabit managed switch, hereinafter referred to as NS2010GX. Some pictures for the schematic, the product itself and pictures may be different.



This icon indicates the items to be cautioned in the operation. If the operation is wrong, the equipment may be damaged and other adverse consequences.

Chapter 1 Product Introduction

1.1 Product introduction

NS2010GX is a new cloud management switch. The product adopts a new generation of high-performance hardware and software platforms, providing flexible and cost-effective full gigabit access and gigabit uplink ports. It supports complete security protection mechanisms, comprehensive ACL/QoS policies, and commonly used functions such as 802.1Q VLAN, port monitoring, port aggregation, bandwidth control, etc.

It is easy to manage and maintain and is suitable for campus, hotel, and enterprise network as an access device.


1.2 Packing list

Commodity	Quantity	Description
Switch	1pcs	\
Power cord	1pcs	Optional
User manual	1pcs	Guide users to install switch

1.3 Appearance

● Front Panel

Including indicators, RJ45 port, RST key, SFP port, Console port, as shown below:

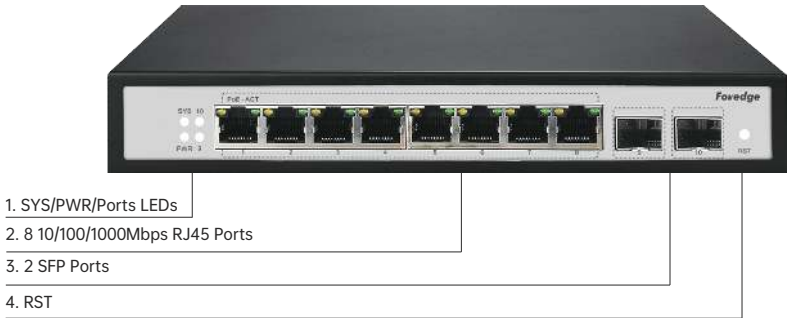

Indicators

NS2010GX indicator working status is shown as the following table:

Indicators	Title	Color	Work status	Description
Power	Power indicator	Red	Solid	Power is normal
			Off	No power, the power switch is not turned on, power supply is abnormal
LINK/ACT	Connection	Green	Blinking	A valid link is established

	indicator		Off	An invalid link is established
SYS	System indicator	Green	Blinking	System is functioning properly
			Off	System is functioning improperly Software is damaged

RJ45 Port

NS2010GX supports 8 * 10/100/1000Mbps ports.

SFP Port

NS2010GX provide 2 Gigabit SFP uplink port, can be inserted with SFP module.

RST Button

When the switch is powered on, press the button with the needle to release the device and enter the restarting state. When the SYS lamp restarts, the device restarts. When the switch is powered on, press and hold the button for more than 5s to release the button and enter the reset state. When SYS is re-lit, the device is reset successfully.

Chapter 2 Installation

2.1 Installation Precautions

.....
 Note: To avoid improper use of equipment damage and personal injury, please observe the following precautions.
.....

● **Installation safety precautions**

- ~The power should be kept off during the installation, while wearing anti-static wrist, and to ensure well touch between anti-static wrist and skin to avoid potential safety hazard;
 - ~The switch just work normally when it is powered by the correct power supply. Make sure that the power supply voltage matches the voltage indicated by the switch;
- Before powering on the switch, make sure that the power circuit is not overloaded, which may affect the

normal operation of the switch and even cause unnecessary damage;

~To avoid the risk of electric shock, do not open the case while the switch is working. Do not open the case even when it is not powered;

~Before cleaning the switch, unplug the switch from the power cord and do not wipe it with wet cloth. Do not wash it with liquid.

● **Temperature and humidity**

To ensure the long-term stability working of the switch, please maintain a certain temperature and humidity environment. High or low humidity easily lead to leakage of insulation materials, deformation and even the corrosion of metal parts, the temperature is too high will accelerate the aging process of insulating materials, seriously affecting the service life of equipment. The normal operation of this series of switches and storage temperature/ humidity are as follows:

Environmental description	temperature	Relative humidity
Working environment	0°C~40°C	10%~90% RH no condensation
Storage environment	-40°C~70°C	5%~90% RH no condensation

● **Altitude**



Products with this logo are only for safe use in areas below 2000m altitude

● **Dust-proof**

Dust on the switch surface will cause electrostatic adsorption, poor contact of the metal contacts. Although the device itself has done some measures in anti-static, but when the static electricity exceeds certain intensity, it will still cause fatal damage to the electronic components on the internal circuit board. In order to prevent static electricity from affecting the normal operation of the equipment, please note the following:

- Regular dust, keep the indoor air clean;
- Make sure the equipment is well grounded to ensure smooth transfer of static electricity.

● **Electromagnetic interference**

Electromagnetic interference have an impact on the device capacitance, inductance and other electronic components by capacitive, inductive coupling, impedance coupling and other conductive, in order to reduce the adverse effects caused by electromagnetic interference, please note the following:

~ Power supply system to take the necessary anti-grid interference measures;

~ Switches should be far away from high-frequency high-power, high-current devices, such as wireless transmitters;

~ If necessary, take electromagnetic shielding measures.

● **Lightning protection**

When a lightning strike occurs, a strong current will be generated in an instant cause fatal damage to electronic equipment. To achieve better lightning protection, please note the following:

Make sure the rack and the ground to maintain good contact;

Make sure the power outlet is in good contact with the earth;

Reasonable wiring, to avoid the internal sense ray;

Outdoor wiring, it is recommended to use the signal lightning protection device.

● **Installation desk requirement**

Regardless of whether the switch is installed in a rack or on another horizontal workbench, be aware of the following:

Make sure the rack or workbench is stable, strong, and can withstand at least 5.5Kg weight;

Make sure the rack has a good cooling system, or maintain good indoor ventilation;

Make sure the rack is well grounded and the power outlet and switch are within 1.5 meters.


● **Prepare tools for installation**

You may need to use a screwdriver during installation, electrostatic wrist strap, fiber optic cable and other tools to prepare your own.

Chapter3 Hardware connection

3.1 RJ45 port connection

Connect the RJ45 port of the switch and the corresponding network device via cables, such as APs, PC, and network cameras.

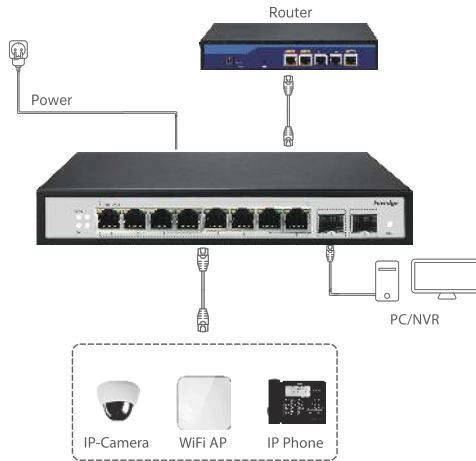

Note: When the switch connected workstations, servers, routers or other Ethernet devices the cable length should be within 100 meters;

The Auto-MDI/MDIX Ethernet interface is enabled by default. Category 5, the standard network cable or crossover cable can be used for Ethernet connection.

Do not connect the RJ45 port to the phone line.

3.2 SFP Port connection

NS2010GX SFP port only support Gigabit fiber module. Recommended use of standard SFP module products.

The process of installing a fiber module on a switch is as follows:

First, grasp the optic fiber module from the side, insert it smoothly along the SFP port slot until the optic fiber module and switch are in close contact;

Second, confirm the Rx and Tx ports of the fiber module when connecting, insert one end of the fiber into the Rx and Tx ports correspondingly, ensure that the Tx and Rx ends of the interface are connected correctly and the other end of the fiber is connected to another device;

Third, please check the corresponding indicator light status after power on. If the light blinking that the link is properly connected, if the light is off, the link is failure, please check the line to confirm that the corresponding equipment is enabled.



Note: Does not allow excessive bending fiber, the radius of curvature should not be less than 10cm;

Ensure the cleanliness of the fiber surface;

Please do not look directly into the optical fiber connector with your eyes as this may cause eye injury.

3.3 Check before power on

Check whether the outlet power supply meets the switch specifications;

Check the power, switches, racks and other equipment have been properly grounded;

Check whether the switch and other network devices are connected properly.

3.4 Device initialization

The switch automatically initializes when the power switch is turned on.

Indicator will appear the following situation:

After the power is turned on, the power indicator remains on, the other indicator is off at this time;


After about 1 second, all lights except for the power light turn on for about 35 seconds and then turn off;

when the SYS light goes flashing, the system runs normally;

Port LEDs indicates the connection status of each port, indicating that the switch has started to work normally.

3.5 Web Login

Step1: In the normal operation of the device, connect the computer to the switch's RJ45 port by network cables.

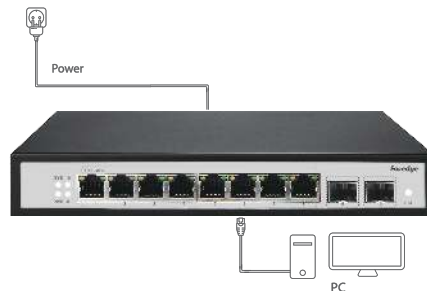


Computer Connection Diagram

Step2: Manually changed the computer IP address to 192.168.254.X (X is 2 ~ 254), subnet mask is 255.255.255.0.

Step3: Open computer's browser, type 192.168.254.1 in the address box, hit the Enter key.

Step4: Enter the web login interface of the switch, enter the default username and password admin in the username and password fields, and then click Login.

Step5: Entered the switch web management interface successfully when you see picture as below, you can begin to configure the switch.

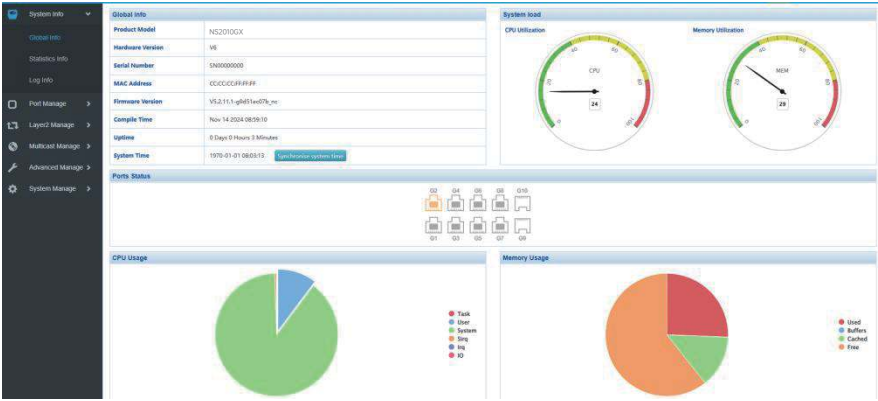

Chapter 4 Hardware Specifications

Port	8 * 10/100/1000Mbps RJ45 port
	2 * SFP fiber port
LEDs	10 Link/Act LEDs
	1 Power LEDs, 1 SYS LEDs
Performance	Forwarding mode: store and forward
	Switch Volume (Full-duplex): 20Gbps
	Packet forwarding rate: 14.88Mpps
	8K MAC address table
Input	DC 12V/1A
Dimension (L*W*H)	225mm*120mm*35mm

Note: The picture in the instruction manual is for reference only, the specific object shall prevail